# Quick Reference Guide for Analogue Door Station Model – AF VPA

### **Installation Instructions**



### **Quick Programming Instruction**

**Step 1**: To enter the programming (or review programming) mode: Call the door station from a key phone, SLT phone or mobile phone. The door station will auto answer and send a "du "sound to acknowledge. Then, by entering # # # within 5seconds, you are in programming mode. (Or by entering # # \* you are in reviewing mode).

**Step 2**: To store phone numbers for the door to call, enter Numbers in Item  $1 \sim 9$  and Item 0:

Key-in the  $1^{\text{st}} \sim 9^{\text{th}}$  and  $10^{\text{th}}$  stored phone Number respectively. Please enter store numbers in sequence. ie item **1** ~ **9** and followed by item 0. Item 0 represents stored number 10.

**Step 3**: Press # button after finished. Hang up the handset to cancel the wrong programming.

## **Programming and Reviewing Steps:**

- **Step 1:**The door station auto answers and plays a "du" sound. Then, by entering # # # within 5 seconds, you are in programming mode. (Or by entering # # \* you are in reviewing mode).
- **Step 2**:The door station voice wizard instructs you to "Login to the programming mode. Please enter the programming **item**". (or" Login to the reviewing mode. Please enter the programming **item**".)
- **Step 3:**The calling party enters the programming item and # button after finished.
- **Step 4:**The door station instructs you to "Please enter the number" or announce the setting parameter.
- **Step 5:** The calling party enters the numbers that the door station is required to dial or the parameter value. Then press # button after finished. (\* button stands for "pause" delay 1 second.)
- **Step 6:** If the announced messages are as same as the intended ones, it means the programming are correct. If the messages are not correct, hang up to cancel the previous programming.
- **Step 7**: After hearing the message "Please enter the programming **item**" again, escape to the Step 3 for the next programming or reviewing mode. The door station will hang up if no digit was entered within 5 seconds.

#### **Dimensions:**

Physical size: 135 x90mm x 27mm

#### Note:

• For all programming ITEM Codes, please refer to the user guide.