

### ● Call-back / Add-On dialing

- ✧ While LCD displays incoming, outgoing messages, press **REDIAL** Key to dial-back the displayed number.
- ✧ Press **REDIAL** Key twice quickly to add the exchange access code to the displayed number. (Telephone will add the access code "0 or 9" before dialing the number.)

### ● Recall / Flash

Off Hook, press **TRF/FL** Key and dial required extension number to transfer the call.

### ● Hold Call

While the conversation on external/internal call, press **HOLD/DEL** Key and hang up the handset to hold the call temporarily. When pick up the handset again, the held call will be retrieved.

### ● Redialing

Off Hook or press **SPK** Key, press **REDIAL** Key to redial the last number.

### ● Pick Up call

When the incoming call rings, press **SMART** Key to answer the call, if this **SMART** key was properly programmed.  
Default: \* + 1. (as Pick up for Aristel Key Phone Systems)

### ● Handsfree Dialing for SLT70S

### ● Handsfree Conversation for SLT70T

- ✧ On hook, press **SPK** Key to handsfree Dialing or handsfree conversation. Press **SPK** Key again to hang up.
- ✧ On hook, press **0or9** for handsfree dialing or access the CO line to dial out.

### ● Headset application.

- ✧ While incoming call ringing, enable headset of SLT70T and press **SPK** Key to pick up calling; press **SPK** Key again to hang up the call.
- ✧ On hook, enable headset of SLT70T, press **SPK** Key to enable handsfree conversation while hearing dial tone.

### ● Define the Pick Up code

On hook, press **PROG**+ **SMART** key, LCD displays "PICUP" and then enter the programming code. Press **PROG** to save or **SPK** to exit.



Part No. 82S7OMINS3  
Edited in October 2009



### Telephone Quick Programming Mode

For individual item setting, you can use Quick Programming Mode to directly enter the setting of corresponding item.  
Press **PROG**, LCD displays "Set", enter the corresponding Quick mode code as below

- PROG**+**1** ..... Time
- PROG**+**2** ..... LCD brightness adjustment
- PROG**+**3** ..... Local area code
- PROG**+**4** ..... Reserved
- PROG**+**5** ..... Recall/Flash time
- PROG**+**6** ..... Exchange line Access code
- PROG**+**7** ..... Headset Enable/Disable
- PROG**+**8** ..... Pulse/Tone dialing
- PROG**+**SMART** ..... SMART code
- PROG**+**# 0**+ **PROG** when used with a switching System, if "0" is the auto line select code.
- PROG**+**# 9**+ **PROG** when used with a switching System, if "9" is the auto line select code.
- PROG**+**# 7**+ **PROG** when used with a direct Exchange line. (Default)

After entering the setting menu of any items and using quick programming mode, you can also enter other items by pressing **PROG** repeatedly.

## Frequently used parameter

1. Press **PROG** + **1-8** Key to enter Programming and use **▼** or **▲** Key to adjust or enter value. Press **PROG** to save setting and move to next item
2. While programming, Press **SPK** Key to exit Programming or do not save setting.

### ● Volume adjustment

#### ◇ Speaker volume adjustment

Press **SPK** Key to use handsfree, Press **▼** or **▲** Key to adjust Speaker volume to the desired level.

(There are 4 different volume levels. Default: 1)

#### ◇ Handset volume adjustment

Pick up handset, Press **▼** or **▲** Key to adjust handset volume to the desired level.

(There are 4 different volume levels. Default: 1)

#### ◇ Ring tone volume adjustment

While the phone was rung, press **▼** or **▲** Key to adjust Ring tone volume to the desired level.

(There are 4 different volume levels. Default: 2)

### ● Date and Time Setting

Enter Programming, the year digits blink.....

Press **▼** or **▲** Key to adjust, Press **PROG** Key to save setting and move to the next item. Press **SPK** Key to exit programming or do not save setting.

The sequence of setting is year, month, day, hour and minute.

### ● LCD Brightness Adjustment

LCD Displays "2 LCd-2"

Press **▼** or **▲** Key to adjust LCD brightness to the desired level.

(There are 4 different brightness levels. Default: 3)

### ● Local Area Code Setting

LCD Displays "3 LOCAL \_ \_ \_ \_"

Input the local area code, and the telephone will delete local area code on LCD with every incoming call.

### ● Recall/Flash Key Time Setting

LCD displays "5 FLASH \_ \_ \_",

input 005-090, Unit: 10ms

Default : 036\*10ms =360ms

### ● Auto Exchange Line Access Code Setting

◇ LCD displays "6 COdE1 \_ \_ \_", input the first group of exchange access code, press **▼** / **▲** to save and enter the second group.

◇ LCD displays "6 COdE2 \_ \_ \_", input the second group of exchange access code. Press **REDIAL** to enter a standing for status of any number.

Once the code is set, the telephone will dial the access code automatically and pause one second before dialing out the telephone number when using the Auto call-back and redial operation.

If the phone is connected directly to the exchange line, **CANCEL** the exchange access code.

### ● Headset Enable/Unable Setting

◇ LCD displays "7 HEADSET \_ \_ \_", Enter the value: 11 to activate the Headset function.

◇ LCD displays "7 HEADSET \_ \_ \_", Enter the value: 00 to disable the Headset function.

### ● Tone Pulse Setting

LCD displays "8 PULSE-0", Enter the value: 1-pulse, 0-tone

Default : 0

### ● Smart Code Setting

On hook, press **PROG** + **SMART** key. LCD displays "S\_Art-", Enter the access code number. This function will enable the station to operate the defined function by press "Smart" key.

Default: \* + 1. (as "pick up" function at **Aristel** Key Phone Systems)

## Telephone Basic Function Operation

### ● DSS key M1~M20 Programming and calling out.

◇ Programming: On hook, press **PROG**+**M1**~**M20** Key and enter telephone number and then press **PROG** key to save or press **SPK** to exit.

◇ Calling out: On hook, press any key of **M1**~**M20**

### ● Incoming Numbers Search

On hook, press **▲** Key to activate incoming numbers search. Press **▼** or **▲** again to search the numbers and its date and time backwardly. Press **REDIAL** Key to dial this current number.

Press **HOLD/DEL** Key to delete the current record, or hold **HOLD/DEL** for three seconds to delete all incoming records.

### ● Outgoing Numbers Search

On hook, press **▼** Key to activate outgoing numbers search. Press **▼** or **▲** again to search the numbers and its date and time backwardly. Press **REDIAL** Key to dial this current number.

Press **HOLD/DEL** Key to delete the current record, or hold **HOLD/DEL** for three seconds to delete all outgoing records.